


## DPI CONFIGURATION

The Raptor offers five presets that can be easily configured using the accompanying software, allowing you to customize each one to your preference. Simply use the preset button to adjust the DPI as required.

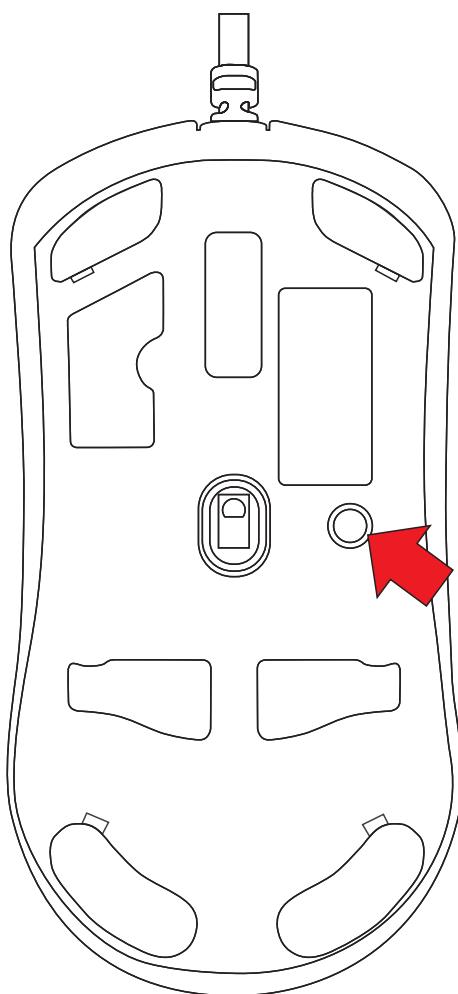

### Default DPI settings

- 400
- 600
- 1600
- 2400
- 3200

Up to 26,000 DPI in software